



Programming guide

Control Panel and menu

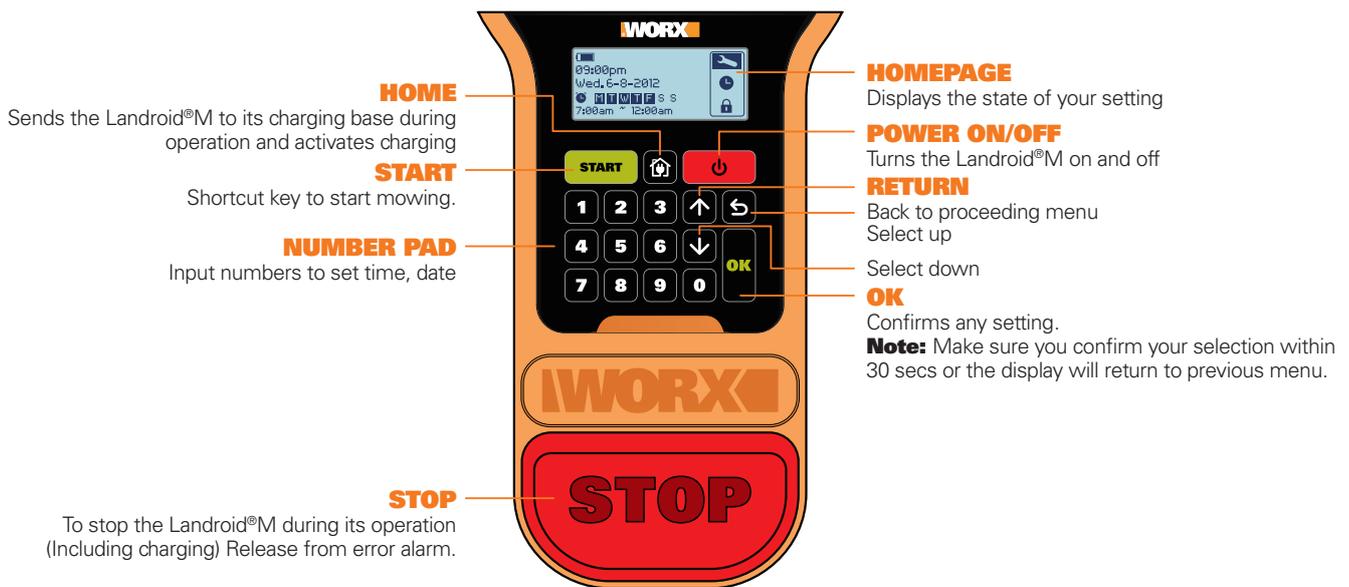

Menu overview

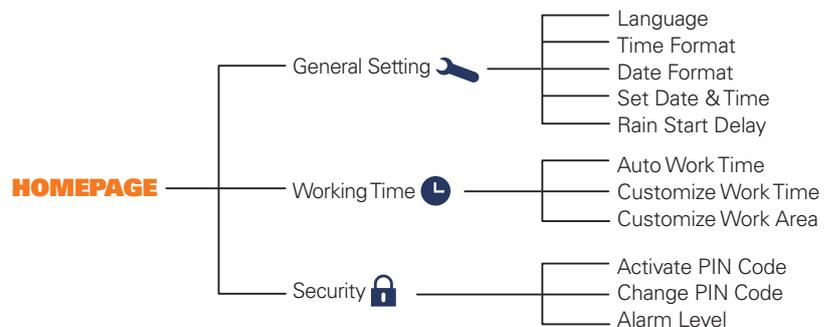

Programming

After you have successfully installed the Landroid®M, it is now ready to be programmed according to your schedule. To program your Landroid®M, simply follow the step by step guide below.

Start

 
 
 
To quick start your Landroid®M, first press **POWER ON/OFF** until the Landroid®M turns on and then press **START**.

START is the shortcut button to command your Landroid®M to start mowing. Press **START** to keep working and press **HOME** to make Landroid®M go back for charging and mow the grass near boundary wire at the same time. During Customize work time and Auto work time, Landroid®M will return to the charging station automatically without mowing the grass. The Landroid®M will work continuously until it's out of battery and then it will return to the charging base. Once charging is complete, the Landroid®M will automatically resume mowing or if it has finished mowing it will stay in the charging base.

Setting

Press **OK** to enter the submenu. Use the **UP**/**DOWN** keys to select General setting, Working time or Security. Then press **OK**.

1. General setting (wrench icon)



Language, Time format, Date format, Set date & time and Rain Start Delay can be set in this menu, using the **UP**/**DOWN** keys to select then press **OK**. Press **RETURN** to go back to the previous menu.

Note: Set date and Set time are two compulsory setting items. If you don't set these two items, it will influence the Schedule time in the following setting.

1.1 Language

Select the appropriate language by using the **UP**/**DOWN** keys, then press **OK**.

1.2 Time format

Select 12 am 12 pm or 24 hour by using the **UP**/**DOWN** keys, then press **OK**.

1.3 Date format

Select MM-DD-YYYY, DD-MM-YYYY or YYYY-MM-DD by using **UP**/**DOWN** keys, then press **OK**.

1.4 Set date & time


Press **OK** first, when the number blinking, press the number directly or use the **UP**/**DOWN** keys to input the actual date or time, then press **OK** to confirm.

Note: Only when the number is blinking you can set the date.

1.5 Rain Start Delay

Press **OK** first, when the number blinking, input the number of minutes from 0-180min. When it rains, the Landroid®M will return to the charging base to wait for the rain sensors to dry. When dry, the Landroid®M CPU will automatically begin the delay start countdown and then return to mowing. If the delay time is set as 0, Landroid will continue mowing.

2. Working time (L)

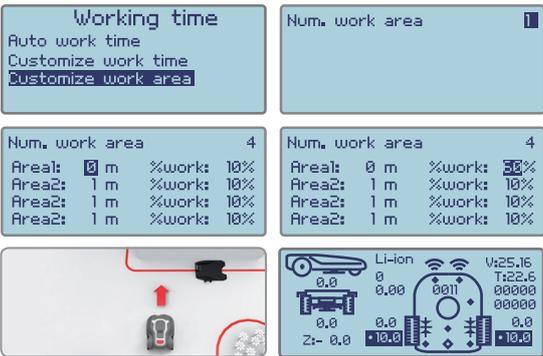

3. Security (L)



Auto work time, Customize work time can be set in this menu, use the **↑** **↓** keys to select then press **OK**.

You can press **START** to start your Landroid®M when Customize work time programming or Auto work time programming is complete.

2.1 Auto work time

Use the **↑** **↓** keys to select the lawn area. The working time will be automatically set according to the size of your garden. Then press **OK**.

Note: The Landroid®M can mow an area to 1000m².

Auto work time will display on the bottom of the display.

A "■" will appear in front of the option you selected.

You could find more details about default work time of Landroid®M in following table:

Landroid®M WG794E - Auto mowing time schedule.								
Area m ²	Auto mowing runtime - hours	Monday mowing hours	Tuesday mowing hours	Wednesday mowing hours	Thursday mowing hours	Friday mowing hours	Saturday mowing hours	Sunday mowing hours
100	3	7:00-8:30	/	/	7:00-8:30	/	/	/
200	7	7:00-8:24	7:00-8:24	7:00-8:24	7:00-8:24	7:00-8:24	/	/
300	8	7:00-8:36	7:00-8:36	7:00-8:36	7:00-8:36	7:00-8:36	/	/
400	11	7:00-9:12	7:00-9:12	7:00-9:12	7:00-9:12	7:00-9:12	/	/
500	13.5	7:00-9:42	7:00-9:42	7:00-9:42	7:00-9:42	7:00-9:42	/	/
600	16.5	7:00-10:18	7:00-10:18	7:00-10:18	7:00-10:18	7:00-10:18	/	/
700	19	7:00-10:48	7:00-10:48	7:00-10:48	7:00-10:48	7:00-10:48	/	/
800	21.6	7:00-11:18	7:00-11:18	7:00-11:18	7:00-11:18	7:00-11:18	/	/
900	24.3	7:00-11:54	7:00-11:54	7:00-11:54	7:00-11:54	7:00-11:54	/	/
1000	27	7:00-12:24	7:00-12:24	7:00-12:24	7:00-12:24	7:00-12:24	/	/

2.2 Customize work time

You can set schedule time from Monday to Sunday.

Press **OK** first, when the number is blinking, Input the start time and hours you want your Landroid®M to mow on a particular day.

If you do not want the Landroid®M to mow on a particular day simply confirm the hours 0.0h.

Working time adjustment

If you are still not satisfied with the time you set, there's a shortcut to adjust the working time. When the Landroid®M is in standby mode, use the **↑** **↓** keys to adjust the working time.

The overall working time will be adjusted in increment of 10% of the overall working time.

2.3 Customize work area

The Landroid®M may be programmed up to four different mowing zones.

You must set the distance from the charging station to each mowing zone. To determine the distance move the Landroid®M into the mowing zone, one meter away from back of the charging base, and press the **Home** button to set it. The Landroid®M will move along the boundary line, when it moves into the next mowing zone press the STOP button and press the **2** button to confirm the distance.

You may delegate the overall working time of the Landroid®M according to the size of each area. First press the OK button so the number will flash. Then use the up and down arrow buttons to select the correct time. Press the OK button to confirm.

Note: In order to successfully confirm the mowing times and areas your selections must be flashing.

Use the **↑** **↓** keys to select Activate PIN code, Change PIN code and Alarm level, then press **OK**.

3.1 Activate PIN code

Select Yes to activate the PIN code. If you don't want to activate the PIN code, just select No.

3.2 Change PIN code

Type the Old PIN (default PIN) 0000, then press **OK**. Then type your New PIN and repeat it.

3.3 Alarm level

Use the **↑** **↓** keys to select the alarm volume setting.

High = loud setting (60~70dB)

Low = quiet setting (40~50dB)

NOTE: If you input the wrong PIN code, the Landroid®M will be turned off automatically. Press On/Off key to On, input the right PIN code, then the Landroid®M will turn on again.

WARNING: If you decide to change the PIN code, be aware there's no way to restore the Landroid®M if you forget the PIN code. Please write your PIN code here and store this sheet in a safe place for future reference. Even better, register your Landroid®M online and enter your PIN code there. You will always be able to find your PIN online at www.worxlandroid.com.

Your PIN code

Function messages

Mowing	Cutting grass according to the program setting.
Raining	When it senses rain, the Landroid®M will return to the Charging Base and stay there for the time you have programmed it to do so. When dry, the Landroid®M CPU will automatically begin the delay and countdown and then return to mowing. If you want Landroid®M to mow before this, simply turn it off then on again, but only when the rain sensor is dry or you can set the delay time to 0 min.
Locating charger base	Needs to recharge—during the journey to the base, the cutting blade is stopped in order to save energy.
Charging	Charge is in progress—charge percentage are displayed.
Waiting for scheduled time	Stand-by, will start according to program set.

Error messages

Outside working area	<ol style="list-style-type: none">1. If the Landroid®M is actually outside its territory: turn power off, take the Landroid®M inside its territory. Turn power on.2. If the Landroid®M is inside its territory: check the LED on the charging base is on. If not, check the plug connection to the mains socket. If the LED is still off, check the boundary wire is well connected to the clamps on the charging base.3. If the problem persists, check that the boundary wire hasn't been cut.
Wrong PIN code	Refer to the "Programming" section to re-set your PIN.
Blade disc blocked	<ol style="list-style-type: none">1. Turn power off.2. Turn the Landroid®M upside down and check if there's anything preventing the blade disc to rotate.3. Remove any possible obstruction.4. Turn the Landroid®M upright and take it to an area with short grass or adjust the cutting height.5. Turn power on.
Wheel motor blocked	<ol style="list-style-type: none">1. Turn power off: take the Landroid®M in an area free from obstacles.2. Turn power on.3. If the error message is still displayed; turn power off; turn the Landroid®M upside-down and check if there's anything preventing the wheels from rotating.4. Remove any possible obstruction, turn the Landroid®M upright, turn power on.
Trapped	<ol style="list-style-type: none">1. Turn power off.2. Take the Landroid®M in an area free from obstacles.3. Turn power on.4. If the error message is still displayed; turn power off; turn the Landroid®M upside-down and check if there's any debris causing a blockage in the top cover.5. Remove any possible obstruction, turn the Landroid®M upright, turn power on.
Lifted up	<ol style="list-style-type: none">1. Turn power off.2. Take the Landroid®M to an area clear of obstacles, turn power on.3. If the error message is still displayed: turn power off, turn the Landroid®M upside-down and check there's nothing trapped.4. Remove any possible object, turn the Landroid®M upright, turn power on.
Upside down	Turn the Landroid®M upright.
Charging Base Blocked	<ol style="list-style-type: none">1. The contact between the Charging and Contact Pins may be obstructed in some way.2. Wipe off the Charging and Contact Pins, making sure there is not an object obstructing them, then place your Landroid®M in the charging base and check that the Pins make good connection.
Battery very low	<ol style="list-style-type: none">1. This means that there is low battery voltage.2. In this case you must place the Landroid®M in the Charging Base, then press the ON/OFF key to start charging.

Notes

- **If the above error messages appear on the display, correct the problems first, then press "START" to reset.**
- Before turning power on, always check the Landroid®M is inside its territory. If not, the message "outside working area" will be displayed. This message is displayed also when the Landroid®M is sitting over the boundary wire when turned on.
- If for any reason—i.e. a party, children playing...—you want to park your Landroid®M in the charging base: press the key with the home symbol. The Landroid®M will go to its base and stay there. Please note the Landroid®M will now wait until the next scheduled mowing session. If you want to re-start it: turn power on. Landroid®M will now resume its scheduled mowing session.
- If an error repeatedly occurs in the same area of your lawn, you might have a problem with the boundary wire so please refer to the previous installation instructions and check your set up with its help.
- If your lawn is divided in two separated areas, connected by a corridor less than 1m, one of which is not provided with the charging base: when the Landroid®M runs out of charge, take it manually to the charging base, turn power on, and the charge process will start.
- If the Landroid®M runs abnormally once in a while, please try to restart it. If the problem cannot be solved, please contact WORX Service Agent for help.
- Do not wash the machine with a high pressure washer. This could cause damage to the battery or the machine.